
RV14-50R 240V /50A Replacement Receptacle

INSTRUCTIONS:

- 1. Disconnect Power. Strip outer insulation 5", cut black and red wires to 3" and green wires to 2". Strip each wire 1/2".
- 2. Remove receptacle cover and 8 AWG insert part.
- 3. Attach black wire (Hot 1) under black set screw, red wire (Hot 2)under black set screw, white wire (neutral) under silver set screw, green wire (ground) under green set screw.
- 4. If using 8 AWG cable, use 8 AWG part. Re-attach cover, tighten screws.

WARNING: Failure to follow instructions may cause personal injury and/or damage to equipment. Unit should be installed by a qualified person or electrician only.

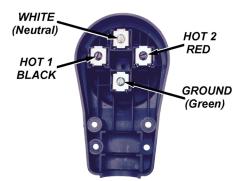


919-267-6948
ProgressiveIndustries.net

RV14-50R 240V /50A Replacement Receptacle

INSTRUCTIONS:

- 1. Disconnect Power. Strip outer insulation 5", cut black and red wires to 3" and green wires to 2". Strip each wire 1/2".
- 2. Remove receptacle cover and 8 AWG insert part.
- 3. Attach black wire (Hot 1) under black set screw, red wire (Hot 2)under black set screw, white wire (neutral) under silver set screw, green wire (ground) under green set screw.
- 4. If using 8 AWG cable, use 8 AWG part. Re-attach cover, tighten screws.

WARNING: Failure to follow instructions may cause personal injury and/or damage to equipment. Unit should be installed by a qualified person or electrician only.

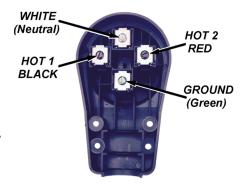

919-267-6948
ProgressiveIndustries.net


RV14-50R 240V /50A Replacement Receptacle

INSTRUCTIONS:

1. Disconnect Power. Strip outer insulation 5", cut black and red wires to 3" and green wires to 2". Strip each wire 1/2".

- 2. Remove receptacle cover and 8 AWG insert part.
- 3. Attach black wire (Hot 1) under black set screw, red wire (Hot 2)under black set screw, white wire (neutral) under silver set screw, green wire (ground) under green set screw.
- 4. If using 8 AWG cable, use 8 AWG part. Re-attach cover, tighten screws.

WARNING: Failure to follow instructions may cause personal injury and/or damage to equipment. Unit should be installed by a qualified person or electrician only.

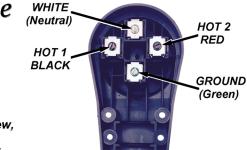


919-267-6948
ProgressiveIndustries.net

RV14-50R 240V /50A Replacement Receptacle

INSTRUCTIONS:

- 1. Disconnect Power. Strip outer insulation 5", cut black and red wires to 3" and green wires to 2". Strip each wire 1/2".
- 2. Remove receptacle cover and 8 AWG insert part.
- 3. Attach black wire (Hot 1) under black set screw, red wire (Hot 2)under black set screw, white wire (neutral) under silver set screw, green wire (ground) under green set screw.
- 4. If using 8 AWG cable, use 8 AWG part. Re-attach cover, tighten screws.

WARNING: Failure to follow instructions may cause personal injury and/or damage to equipment. Unit should be installed by a qualified person or electrician only.

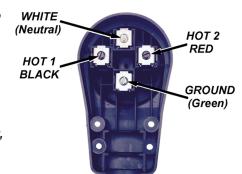

919-267-6948
ProgressiveIndustries.net